

HV 2/4

List of spares

When placing orders for spares, never forget to mention the required number of pieces, the type or number; for illustration no. 1 also the voltage,

periodicity and the arrangement of the fastening holes HV 2 or HV 2 B2.

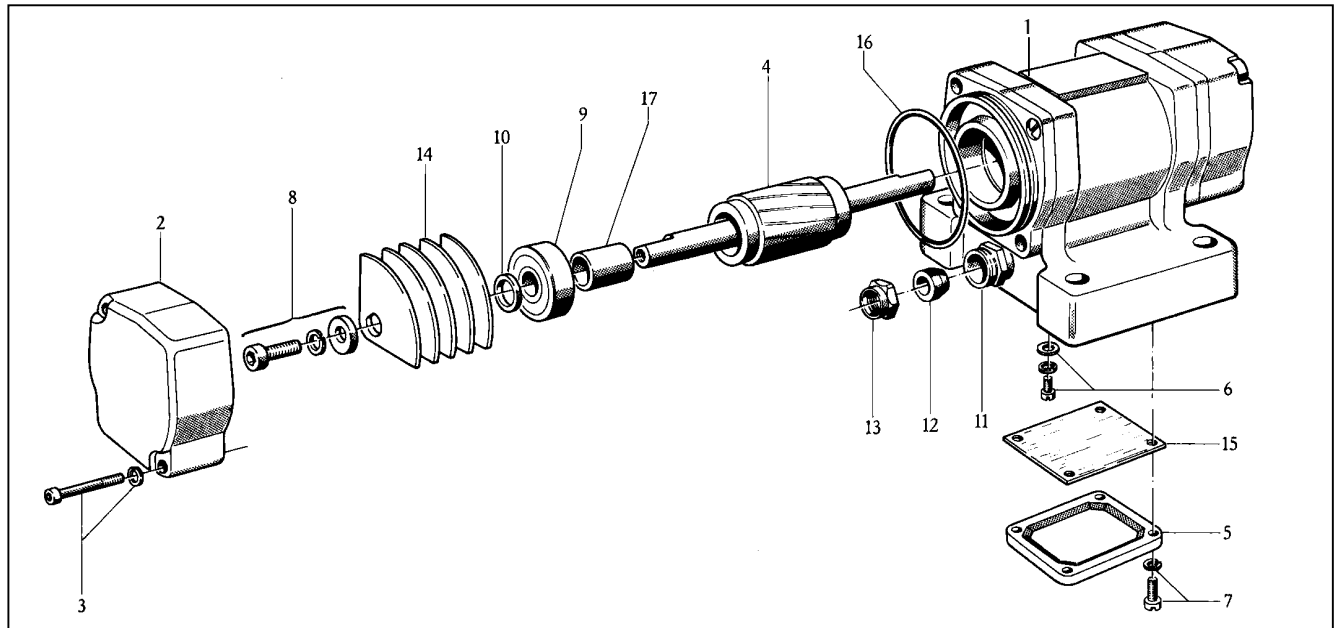


Fig. No.	Order No.	Pieces				
		HV2/4	HV2/4-2	HV2/4-4	HV2/4-6	HV2/4-9
1	6 1 4 3 1 housing complete HV 2/4 or	1	1	1	1	1
1	6 1 4 5 1 housing complete HV 2/4 B2	-	-	-	-	1
2	protecting cover	2	2	2	2	2
3	screw for protecting cover	4	4	4	4	4
4	armature	1	1	1	1	1
5	0 0 4 0 1	1	1	1	1	1
6	2 1 1 0 1	1	1	1	1	1
7	2 1 3 0 1	4	4	4	4	4
8	2 2 5 5 1	2	2	2	2	2
9	2 4 3 0 1	2	2	2	2	2
10	2 7 0 0 1	2	2	2	2	2
11	2 9 5 0 1	1	1	1	1	1
12	2 9 6 0 1	1	1	1	1	1
13	2 9 7 0 1	1	1	1	1	1
14	7 5 3 1 1	8	12	16	26	40
15	7 5 8 0 1	1	1	1	1	1
16	7 5 9 1 1	2	2	2	2	2
17	7 6 4 0 1	2	2	2	2	2

WÜRGES · Vibrationstechnik GmbH · D-86356 Neusäß/Augsburg · Daimlerstraße 9
 telefon: 0049/821/463081 · telefax: 0049/821/463084 · e-Mail: info@wuerges.de · internet: http://www.wuerges.de

